

D140



IP desk phone / Corded handset

Short User Manual




English



German



Italian

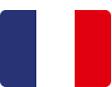

French



Spanish



Portuguese



Greek



Polish



Russian



Turkish

Getting started

(A) Unpacking and inspecting the delivery content




A-1: IP desk phone D140 | **A-2:** Handset cord | **A-3:** Handset | **A-4:** Footstand | **A-5:** Ethernet cable: 1.5 m | **A-6** Documentation


(B) Getting to know the D140 components

The hardware components of the D140 can be summarized as follows:

- Audio devices → **B-1 - B-4**
- Display and indicators → **B-5, B-6**
- Hard keys → **B-7 - B-12**

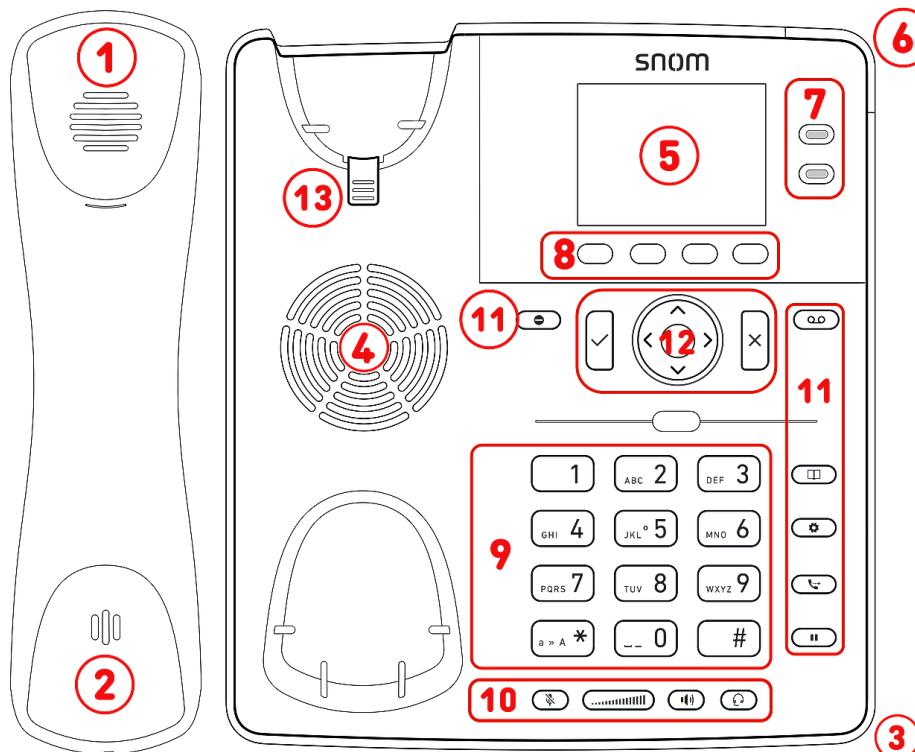

- B-1:** Handset earpiece
- B-2:** Microphone
- B-3:** Casing microphone
- B-4:** Casing speaker
- B-5:** Display
- B-6:** Call status indication (with red LED)
- B-7:** 2 SmartLabel keys (with multicolour LED)
- B-8:** 4 context-sensitive function keys
- B-9:** 12 keys (standard ITU telephone keypad)
- B-10:** 5 dedicated audio keys
- B-11:** 6 dedicated function keys
- B-12:** 5-way navigation key & Ok / Cancel
- B-13:** Handset rest tab

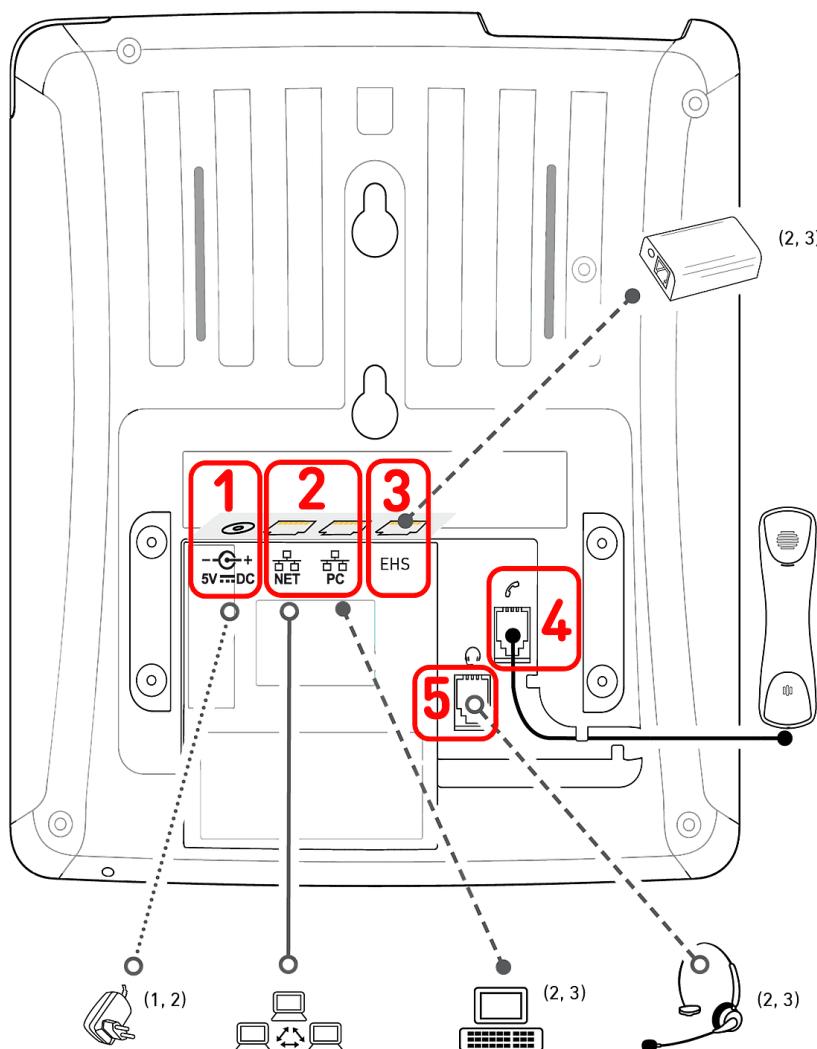(C) Interfaces and connections**Wired interfaces**

C-1: Power adapter: coaxial power connector (socket)

C-2: Network connectivity: 2 × RJ45-8P8C (NET/PC) sockets

- **Power over Ethernet (PoE):** IEEE 802.3af, class 1, IEEE 802.3az⁴
- Ethernet 10/100 Mbit/s

C-3: EHS adapter: RJ12-6P6C socket

C-4: Corded handset: RJ9-4P4C socket

C-5: Headset: RJ9-4P4C socket

Wireless interfaces

-/-

¹ If PoE is not available

² Not included in delivery

³ Optional


⁴ Optional via software

Preparing the D140 for use

Attaching footstand and handset

Note: The footstand can be attached at two different angles: low angle 28° or high angle 46°

1. Before attaching the footstand to the phone, plug the long end of the handset cord into the RJ9-4P4C connector labelled  on the back of the phone and place the cord in the cable guide.
2. Place the top of the grooves on the footstand below the slideguides on the back of the D140.
3. Push the footstand upwards onto the slideguides until it locks into place.
4. Plug the short end of the handset cord into the connector on the handset.
5. Place the D140 on an even, horizontal surface.

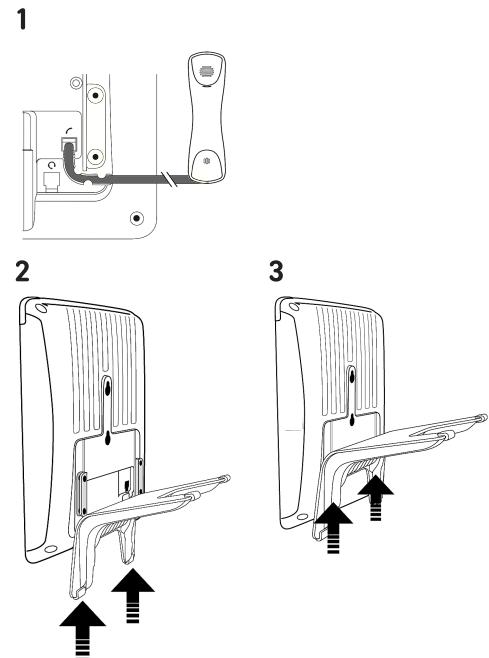

Connecting and powering up

The phone can be operated with Power over Ethernet (PoE) provided via the network cable or, if PoE is not available in your network, with the separately available 5V DC power adapter


1. Plug one end of the Ethernet (network) cable into the RJ45 connector labeled **NET** and the other one into the network side to establish a data link.
2. If PoE is not available, hook up the plug of the power supply to the wall outlet.
3. The second RJ45 connector, labeled **PC**, is for daisy-chaining further Ethernet devices without the need for a second Ethernet connection line.
4. Snom phones are plug-and-play. Once the phone is connected to your network, it will begin to initialize. If your local network or VoIP provider supports *Snom's auto provisioning features*, the phone will start up automatically without interruption. In this case continue with the next chapter, otherwise refer to chapter [Putting the D140 into operation](#)

Getting to know the display and controls

Display (see → *Getting started* → *Getting to know the D140 components* → B-5)

This display presents the following information:

In idle mode:

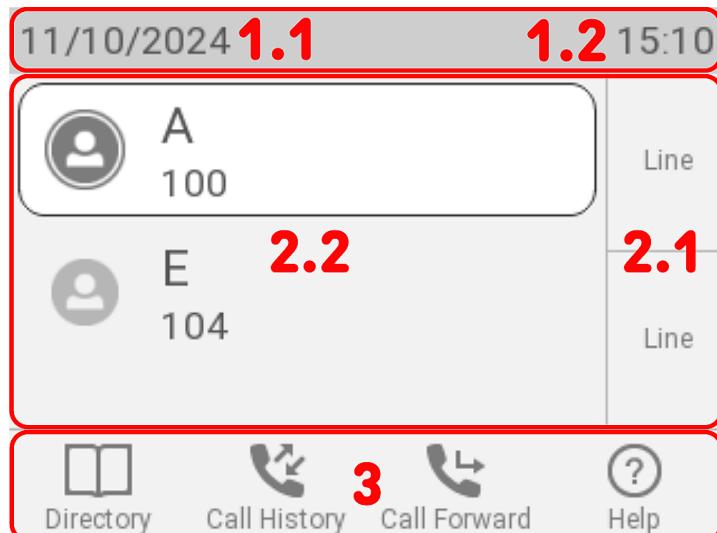

1. Info bar/status line

1. Date
2. Status messages | Time

2. Context area

1. 2 SmartLabel keys (see → *SmartLabel keys*)
2. Configured identities and their actual state



Registering



Registered (active)



Outgoing



Not registered



Forwarding



Do Not Disturb

3. Function key line, context-sensitive: (see → *Context-sensitive, programmable function symbols and function keys*)

When the phone is active:



1. Info bar/status line

1. Name of current activity | Date
2. Audio devices | Time

2. Context area

1. Depending on the context, the SmartLabels will or not be shown.
2. Depending on the activity, this area will contain symbols and text.



Outgoing ringing



Incoming ringing



Call waiting



Connected



Held by other party



Busy



Holding



Disconnected

3. **Function key line, context-sensitive:** Depending on the current activity of the phone, the function key line will present various functions that can be activated by pressing the function key underneath the respective symbol.

Call indicator (see → *Getting started → Getting to know the D140 components → B-6*)

The bright-red LED situated on the top right corner of the phone indicates **incoming, ongoing, held, and missed calls**. LED status indications:

- Blinking rapidly when a call is coming in.
- Glowing steadily when dialing, when in a call, and when you have missed a call. To turn the LED off after a missed call, press the right arrow on the navigation key to view the **Missed calls** menu and simultaneously turn off the LED.
- Blinking slowly when you have put a call on hold.

SmartLabel keys (see → *Getting started → Getting to know the D140 components → B-7*)

2 SmartLabel keys (freely programmable function keys with LEDs) on the right side of the SmartDisplay execute the functions defined by the SmartLabel. They can be programmed and labeled on the phone via menu-driven phone user interface (PUI) and on the **Function Keys** page of the phone's web user interface (WUI).

SmartLabel Keys								
Context	Type	Number	Short Label Mode	Full Label Mode	Short Label	Full Label	XML Label	
Active	Line		Icon and Text	Icon and Text				P1
Active	Line		Icon and Text	Icon and Text				P2

Default setting: P1-P2 → Line

Depending on the function mapped onto the key, the red or green LEDs on the key will be activated when the key event occurs. The LED of a **line** key will

- blink rapidly when a call is ringing on the line
- glow steadily when there is an ongoing call on the line
- blink slowly when a call is on hold on the line
- be off when the line is free.

When other functions are mapped onto the keys, the LEDs may glow or blink. For example: When the **extension** function has been mapped onto a key and monitoring of extensions is enabled on both phones, the LED will

- blink rapidly when a call is ringing on the extension
- glow steadily when the extension is busy
- be off when the extension is not busy

Context-sensitive, programmable function symbols and function keys (see → [Getting started → Getting to know the D140 components](#) → B-8)

4 context-sensitive, programmable function keys (F1 - F4) are located directly below the display and can be programmed on the **Function Keys** page of the phone's web interface (**WUI**) with a number of key events; these functions will then be available when the phone is in idle mode.

Type	Number	Label
Key Event	Directory	F1
Key Event	Call History	F2
Call Forward		F3
Key Event	Help	F4

Default setting: Standard functions available on idle screen



Directory



Call history



Forward all



Status messages



Help

F1 Internal phone directory **F2** Call lists (missed, received, dialled calls)

F3 Forwarding all calls (on/off)


F4 Status information or IP address

Press the function key underneath the display symbol to activate the function, open the list etc. depicted by the symbol above the key.

Alphanumeric keypad (see → [Getting started → Getting to know the D140 components](#) → B-9)

1 alphanumeric keypad consisting of 12 hard keys, located in the center of the lower device part.

1

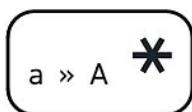


Star key


- **In editing mode:** Press (1) for one second to change input mode (numerals > lower case > upper case) or press (1) briefly to type *.
- **On idle screen:** Press (1) for 3 seconds to lock/unlock the keypad.

Audio control keys (see → *Getting started → Getting to know the D140 components → B-10*)

5 audio control keys are used to adjust the volume, for muting and unmuting the microphone, to activate speakerphone and headset mode.

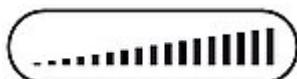

Volume + / -

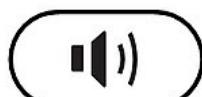

Speakerphone



Mute

- **Adjusting the volume of the ringer when the phone is idle or ringing**
- Adjusting the volume of the loudspeaker in handset, casing, or headset, respectively, when in call

- **Toggling between handsfree and handset mode**
- Dialling and accepting calls on speakerphone



Headset

- **Muting and unmuting the microphone**

- Toggling headset mode on and off

Dedicated, customizable function keys (see → *Getting started → Getting to know the D140 components → B-11*)


6 preprogrammed, variably programmable function keys have their factory settings printed on the key. Other functionalities can also be programmed onto them.

Type	Number
Key Event	Voicemail
Key Event	DND
Key Event	Directory
Transfer	Transfer
Key Event	Hold
Key Event	Settings

Default setting:

Message

- **Retrieving messages from the mailbox (if applicable)**

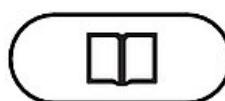

Directory

- Accessing the built-in directory of the phone



Settings

- Invoking the settings menu of the phone user interface (PUI)



Hold

- **Holding or unholding an active call**



Transfer

- **Transferring calls**




Do not disturb (DND)

- Toggling **Do not disturb (DND)** mode for all identities registered on the phone.

Navigation, confirmation, and cancel keys (see → *Getting started* → *Getting to know the D140 components* → B-12)


They can be programmed with the key events available in their drop-down menus. You can select a different key event to be available on each respective key when the phone is in idle mode. You cannot change the functions that are available when the phone is active, for example when you are in a call, when the phone is ringing, etc.

Default setting:

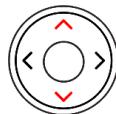


Navigation key: up/down

- **On idle screen:** Select the outgoing identity
- In other contexts: Navigate up/down

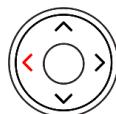

Navigation key: left

- **On idle screen:** Opening list of received calls
- **In editing mode:** Moving the cursor to the left one character at a time

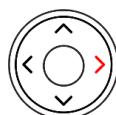

Navigation key: right

- **On idle screen:** Opening the list of missed calls and simultaneously turning off the missed call LED
- **In editing mode:** Moving the cursor to the right one character at a time



Navigation key:
center



Ok

- **On idle screen:** List dialled calls
- Accepting calls on speakerphone and in headset mode
- Confirming, saving actions & input, and returning to previous screen



Cancel

- Terminating calls on speakerphone and in headset & handset modes
- Canceling actions & input, and returning to previous screen

Type	
Previous Identity	Up 
Missed Calls	Right 
Next Identity	Down 
Accepted Calls	Left 
Redial	OK 
Cancel	Cancel 


Putting the D140 into operation

Initializing and registering the phone

Note: You will need the **registration information** received from your Internet service provider or your network administrator - normally the **phone or extension number**, the **password**, and the **registrar (SIP domain)**.

Normally the initialization is completely automatic, using DHCP. If your network does not support DHCP, press the **Cancel key** and enter the **IP address**, **netmask**, **IP gateway**, and **DNS server** manually.

Watch the display and, when prompted, **select** an option by **pressing the up or down arrow on the navigation key**. **Save** your selection by **pressing the OK key**.

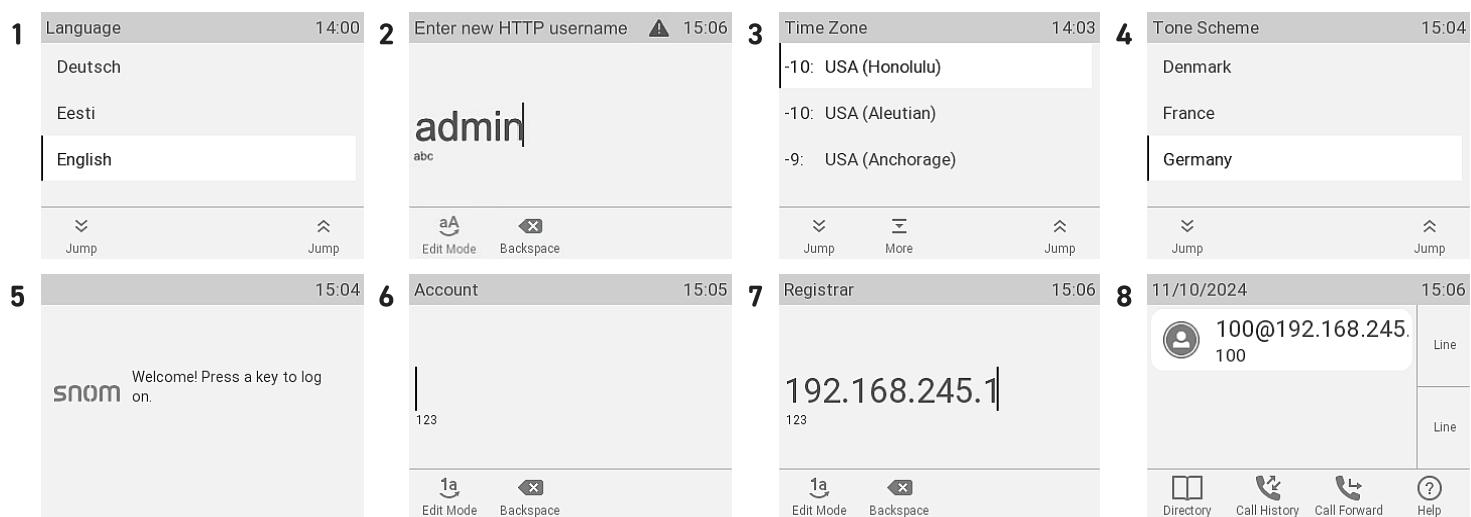

1. You will be prompted to select a **language**. The default is **English**.
2. Next, you will be prompted to enter a **HTTP username and password** for accessing the phone's web user interface in 2 steps. **(1)** The suggested user name can be used or a new one can be entered. **(2)** You are obliged to set a proper **HTTP password** to operate the phone.
3. Next, you will be prompted in the language of your choice to select a **time zone**. This affects the time shown on your display.
4. Next, you will be prompted to select the **tone scheme** of a country. This affects the **dial tone** you hear when you pick up the receiver. Different countries use different dial tones.
5. The display shows the **Welcome** screen. Press any key to log on.
6. Enter the **account number** and save with **OK key**.
7. Enter the **registrar** and save with **OK key**. If required, enter the **password** received from your Internet service provider or administrator. Press **OK key** to save.
8. After successful registration you will see the **idle screen**.

Adjusting the D140 settings

A comparatively small number of settings can be adjusted directly **on the phone** via *menu-driven phone user interface (PUI)*; many more can be conveniently customized via the *phone's web user interface (WUI)* from a **computer with web browser**.

Note: Snom phones can be operated in administrator or user mode. In administrator mode, all settings are accessible and can be modified; in user mode, a number of settings are not accessible. → **Default setting:** administrator mode

If your phone is administered centrally, **user mode** may be the rule. Please check with your network administrator or VoIP provider. When the phone is running in user mode, the administrator password is required to switch to administrator mode.

Phone user interface

Press



to open the settings menu on the display. To open submenus and settings, select the submenu or setting with the navigation key and press



Web user interface (WUI)

1. Look up the phone's **IP address**. Press



→ Information → Help

2

Help

15:07

To set up your phone, please navigate your webbrowser to:
<https://192.168.245.170:443>
 To get more help visit:
<https://service.snom.com>

- Enter the *IP address* into the browser's address bar on a computer in the same network as the D140.
- The web user interface (WUI) will be invoked. If this is the first time upon manual initialization, the *Security* page is shown, otherwise the *Home screen* opens.

Note: You are obliged to set a proper **HTTP password** to operate the phone.

Available items in the vertical menu on the left side of the window depend on whether the phone is running in user or administrator mode. Any changes you make on the web interface will not take effect until you click on **Save** or on **Apply** and **Save**, depending on your firmware version. Changes will be lost if you open another page of the web interface without first clicking on **Apply/Save**.

3

Security

snom

Operation	Security Advice
Home	We strongly recommend that you secure the web interface in order to protect your phone against remote attacks. Therefore the HTTP User as well as the Administrator Password should be changed from the default value. Changing the HTTP Password is mandatory.
Directory	
Setup	Security Settings State
Preferences	Administrator Password <input checked="" type="checkbox"/> Recommended
Speed Dial	HTTP Server User (Not Default) <input checked="" type="checkbox"/> Mandatory
Function Keys	HTTP Server Password <input checked="" type="checkbox"/> Recommended
Identity 1	HTTP Server Password (Not Default) <input checked="" type="checkbox"/> Recommended
Identity 2	Use Hidden Tags <input checked="" type="checkbox"/> Recommended
Action URL Settings	
Advanced	
Certificates	
Software Update	
Status	Security
System Information	Administrator Password <input type="password"/> <input type="button" value="?"/>
Log	Administrator Password (Confirmation) <input type="password"/> <input type="button" value="?"/>
SBP Trace	HTTP Server User <input type="text" value="admin"/> <input type="button" value="?"/>
DAS Cache	HTTP Server Password <input type="password"/> <input type="button" value="?"/>
Subscriptions	Additionally you should protect the web interface with hidden security tags against remote attackers trying to change phone settings with faked HTTP POST requests.
PCAP Trace	Use Hidden Tags <input type="radio"/> on <input type="radio"/> off <input type="button" value="?"/>
Memory	
Settings	
Manual	
SNOM	
© Snom Technology GmbH	

Using the phone

This section describes the functions of the phone with the factory default settings. If your phone was installed and/or set up by someone else, the default settings may have been changed. Please check with that person or company if the phone does not react as described here.

The caller information displayed on the screen is controlled by a setting on the phone's web interface. The default setting is *Name + Number*. You can change the setting at *Preferences > General Information > Number Display Style* by selecting a different option from the drop-down list.

Making calls

1. Selecting identity for current outgoing call


2. Using different audio devices

- Handset: Pick up the handset, enter the phone number, and confirm with



Ok

or

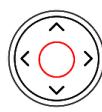

Navigation key: center


or enter the phone number and pick up the handset.

- Headset:
Enter the phone number and press



Headset

- Speakerphone:
Enter the phone number and press

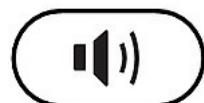

Speakerphone

Accepting calls

Using different audio devices

- Handset: Pick up the handset.
- Headset:
Press



Headset

If the phone is already in headset mode, you can also press the blinking line key.

- Speakerphone: Press



Speakerphone

or



Ok



Navigation key: center

Terminating calls

- When using the handset: place the handset in the cradle or
- When using speakerphone or a headset:

Press



Cancel

Active calls

One call on hold

Press



Hold

or press the function key underneath the following symbol



to put the ongoing call on hold. Held calls are indicated as follows:

- By the text on the display.
- By the slowly blinking line key.
- By the slowly blinking call indication LED.
- By the double beep when you put a call on hold.

You can now:

- transfer the held call blindly or with prior announcement.
- receive and make calls and put other calls on hold.

Pick up the held call by pressing its line key or press again



Hold

or press the function key underneath the following symbol



Retrieve

If the other party hangs up while on hold, the call is terminated on your phone as well and the LED indicators are turned off.

Holding multiple calls

If you are in a call with one party and have one or more calls on hold or if there is more than one call on hold, the following symbols are shown in the function key line according to the use case.



[Back to active call](#) [Previous held call](#) [Next held call](#)

You can now:

- switch back and forth between the active call and any call on hold. Up to **2** simultaneous calls are possible, if supported by the VoIP telephony system.
- When the connected call is on-screen, you can transfer it to a third party or terminate it.
- When a held call is on-screen, press



Ok

to connect to it and put the currently connected call on hold.

Conference


The maximum number of participants in phone-based conferences is **3** (you and 2 others). For the number of participants in server-based conferences and how to set up and join them, please check with your network administrator or your VoIP provider.

Initiating a conference

1. Call the first intended participant (**B, 101**) and put the connected call on hold.
2. Call the next intended participant (**C, 102**) and announce the conference. Put the connected call (**C, 102**) on hold.
3. Press the function key underneath the following symbol to start the 3-way conference




Establish conference

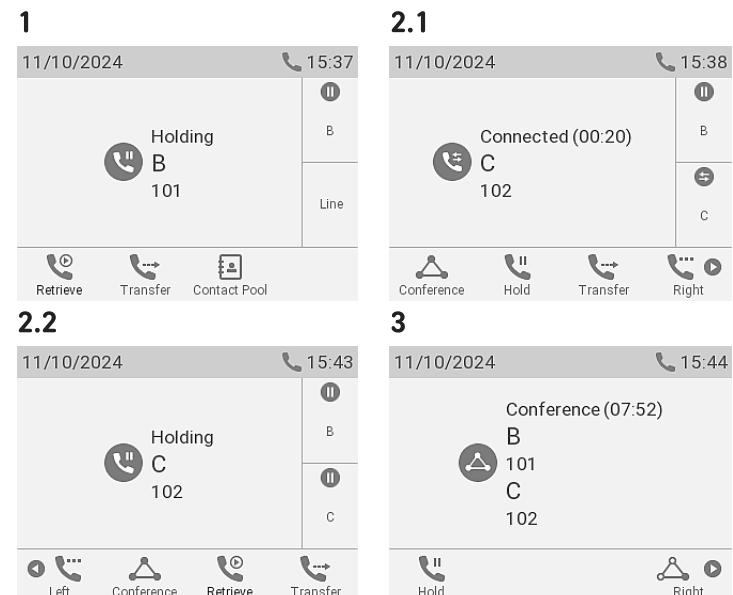

You can now:

- Select individual participants by pressing the corresponding function key below one of these icons
- Talk to one of the participants in private. With one of the participants on-screen, press
- Put one participant on hold. With one of the participants on-screen, press
- Terminate the conference and the connections to both parties by returning to the conference screen.

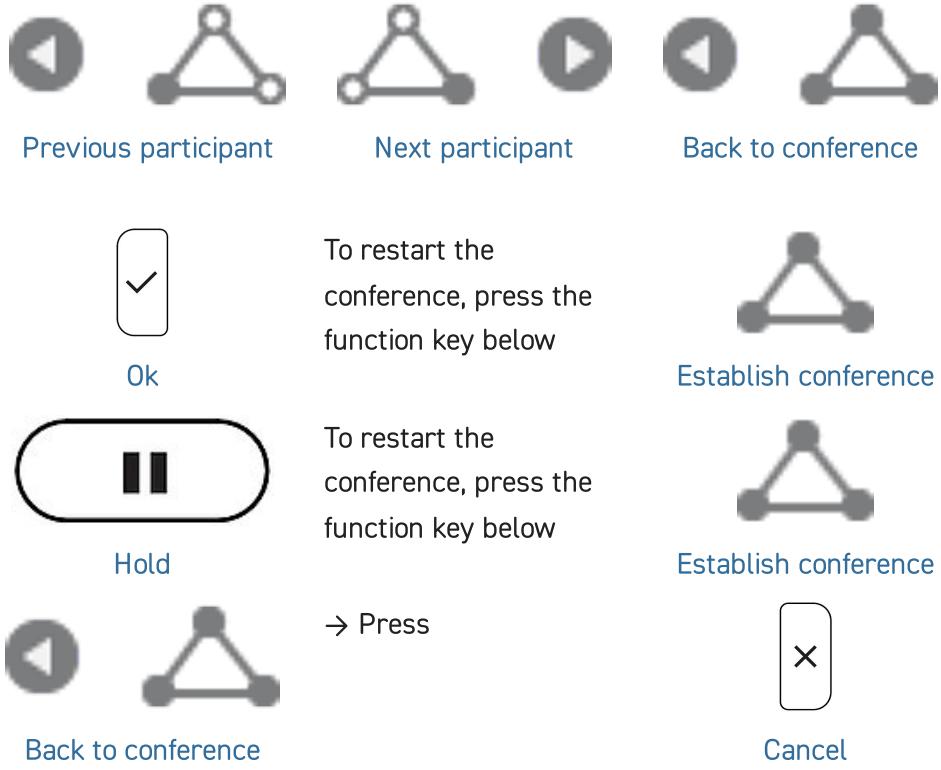

Transferring calls

You can transfer connected calls as well as deflect calls ringing on your phone.

- When you have a call on the line, there are two ways to transfer it to a third party
 - Attended call transfer:** Announcing the call to the third party first, to make sure the call is welcome and will be accepted.
 - Blind call transfer:** There will be no feedback on whether the third party is available and/or picking up the call.
- When a call is ringing on your phone, you can redirect it to a third party without answering it first. → [Call deflection](#)

Attended call transfer: with a single call on the phone → **B, 101**

- Put the connected call (**B, 101**) on hold. Dial the number (**C, 102**) you want to transfer the call to and announce the call.

Note: If the third party does not want to take the call



Cancel

- If the third party (**C, 102**) wants to accept the call



Transfer

or press the function key underneath the following symbol



Transfer

- Press



Ok


or



Navigation key: center


to complete the transfer. → **B (101)** is in a call with **C (102)** now.

1.1

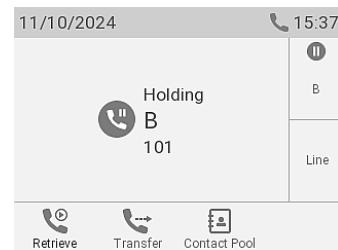

Retrieve Transfer Contact Pool

1.2

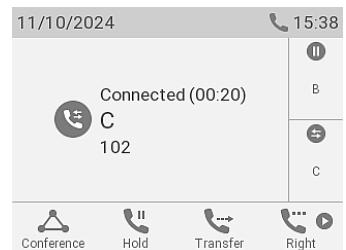


Conference Hold Transfer Right

2



3

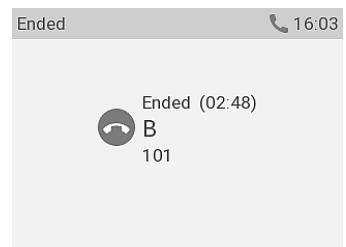

Blind call transfer (active call **B 101**)

1. With an active call (**B, 101**) on the line, press



Transfer

or



Transfer

→ The **dial screen** will appear.

2. Dial the number (**C, 102**) you want to transfer the call to blindly (unannounced), or select one from one of the available phone directories. Press



or




Ok


Navigation key: center

to complete the transfer. → **B (101)** is ringing **C (102)** now.


1.1

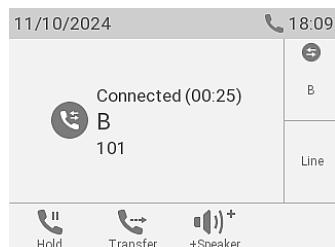


1.2

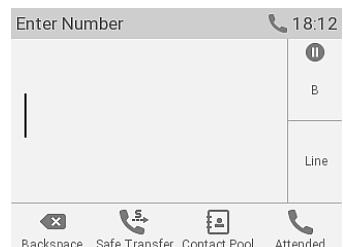

2.1

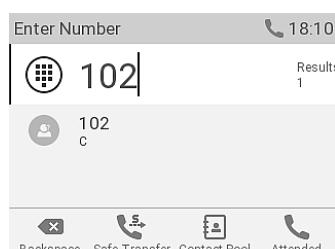

2.2

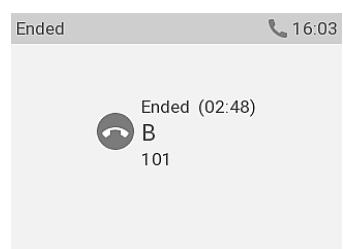

Note: You may briefly see screen message *Ended B 101* indicating that the transfer was completed.

Call deflection (active call **B 101** and call waiting **C 102**)

1. If you are in an active call (**B, 101**) and want to transfer an incoming call waiting (**C, 102**), press the function key underneath



Next call waiting

→ The incoming call waiting appears on-screen.

Note: Your active call remains active while you are transferring the ringing call.

2. Press



or




Transfer


→ The **dial screen** will appear.

3. Dial the number (**D, 103**) you want to transfer the call to blindly (unannounced), or select one from one of the available phone directories. → **C (102)** is ringing **D (103)** now. Your active call (**B, 101**) reappears on-screen.


1.1

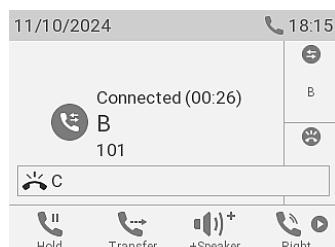


1.2

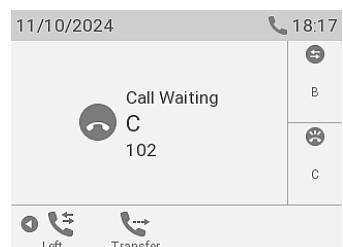

2

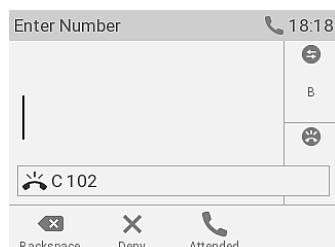

3

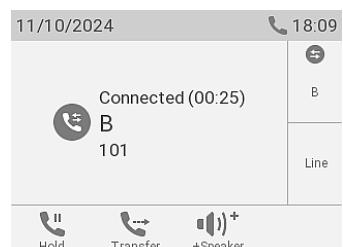

Call deflection (ringing call **B, 101**)

1. With an incoming call ringing (**B, 101**), press



Transfer

or



Transfer

→ The **dial screen** will appear.

2. Dial the number (**C, 102**) you want to transfer the call to blindly (unannounced), or select one from one of the available phone directories. Press




or




Ok

Navigation key: center


1.1

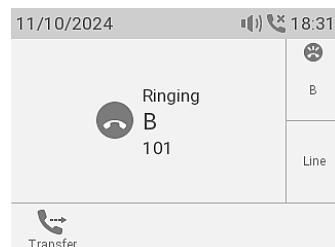

1.2

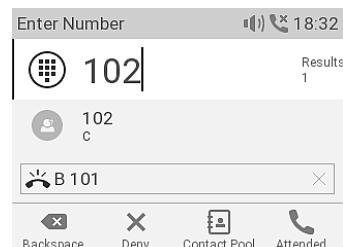

2

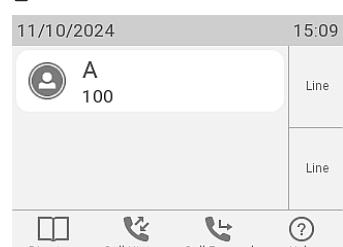

Call lists

Three call lists of **missed, dialed, and received** calls are stored on the phone. They contain the **number, time and date, and duration** of the calls. If the memory allotted to storing the call lists is full, the **oldest ones will be overwritten**.

1. On **idle screen**: press the function key underneath the following symbol




Call history

→ The **call history** screen will appear.

2. To display the lists of missed, received, or dialed calls on-screen, use the navigation key (left/right). On each list, the latest call is at the top of the list. Scroll through the list using the navigation key (up/down). The icons indicate the type of call.




Received calls

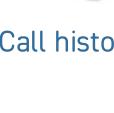

Dialed calls



Missed calls

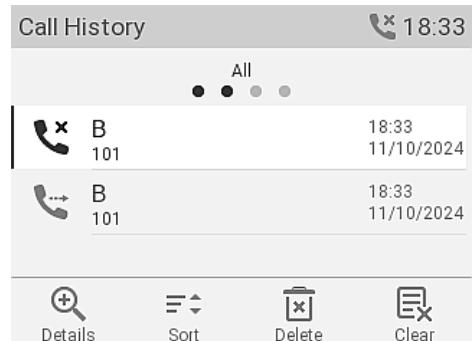

Software update

Manual update

1. Go to Snom's Firmware Update Center and find the latest firmware version for your D140.
2. Please read the instructions and release notes before downloading the firmware.
3. Right-click the *download link* in the Firmware files table and **copy the link**.
4. Open the phone's web user interface (WUI). Navigate to page *Software Update (...)*. In the *Manual Software Update* area, paste the link into the text field of **Firmware**.
5. Click **Load**. The phone begins to reboot.

Note: DO NOT DISCONNECT THE POWER WHILE THE D140 IS REBOOTING!

3

Downloads

Firmware Files

Phone Model	File Size	SHA-256 Checksum	Download Link
D140	41.4 MB	6bac9c765381eb9b8c6622 a54d3f695aad0bb8ae7f65 606dfa2e23d712a25013	https://downloads.snom.com/fw/10.1.184.14/bin/snomD140-10.1.184.14-HW1-SIP-r.bin
D150	41.4 MB	f3521f50819c2006336e3a 7b41abbd30b94a36fc167 d410a085f1553aac92c8	https://downloads.snom.com/fw/10.1.184.14/bin/snomD150-10.1.184.14-HW2-SIP-r.bin

4

Manual Software Update

Operation
Home
Directory
Setup
Preferences
Speed Dial
Function Keys
Identity 1
Identity 2
Action URL Settings
Advanced
Certificates
Software Update
Status
System Information
Log
SIP Trace
DNS Cache
Subscriptions
PCAP Trace
Memory
Settings
Manual

You may explicitly specify which software version you want to run on this phone. Fill in the http URL which is pointing to the firmware you want to use. Please use only a complete http URL (like <http://www.example.com/firmware.bin>). The phone will reboot after you press the load button.

Manual Software Update
Firmware [?](#)
Load

Your phone is shipped with a valid license preinstalled. It is possible to install a new license file via the manual license upload to enable additional software features or to reinstall the preinstalled license in case it is missing or damaged. If the uploaded license file is invalid (e.g. not matching the MAC address of the phone) it will be ignored and the existing license is kept.

Manual License Upload
License file [Choose File](#)
Load

Snom
© Snom Technology GmbH

Auto provisioning

1. Open the phone's web user interface (WUI) and navigate to the *Advanced Settings page > Update tab*.
2. Please click on the help symbol of each line and read the information on each setting carefully before you configure the setting.
3. When done, click **Apply**. If you have changed the setting URL and/or the *PnP configuration*, a reboot is required before they will take effect.

For more information, see our [web page](#).

Troubleshooting

Contacting Support

Click this text (or scan the QR code) to read and follow the detailed instructions given on our website.



Submitting a ticket

Click this text (or scan the QR code) to read and follow the detailed instructions given on our website.



Submitting system and settings information

- [System information](#)
- [Settings information](#)

SIP/PCAP traces

Our support team may ask you to submit a SIP Trace and/or a PCAP Trace to help them analyze your problem.

- [Performing a SIP trace](#)
- [Performing a PCAP trace](#)

Important information

This **D140 Short User Manual** has been derived from the more extensive user manual to give users a more concise overview in their own language. Please refer to the **D140 user manual** regarding the following topics:

[Copyright](#) | [Trademarks](#) | [Legal Disclaimers](#) | [Standards conformance](#) | [Cleaning](#) | [Disposal of the device](#)

Disclaimer

Further information: [D140 webpage](#) | [Snom Service Hub D140](#) | [Quick Installation Guide D140](#) | [Data sheet D140](#) | [User manual D140](#) | [Warranty information](#) | [Type approval](#) | [Company locations](#)

Snom, the names of Snom products, and Snom logos are trademarks owned by Snom Technology GmbH. All product specifications are subject to change without notification. Snom Technology GmbH reserves the right to revise and change this document at any time, without being obliged to announce such revisions or changes beforehand or after the fact. Although due care has been taken in the compilation and presentation of the information in this document, the data upon which it is based may have changed in the meantime. Snom therefore disclaims all warranties and liability for the accurateness, completeness, and currentness of the information published, except in the case of intention or gross negligence on the part of Snom or where liability arises due to binding legal provisions.